

## Jib Boom/Operating Instructions //

### Jib Boom / Please note //

**When using a GENIE Jib Boom, one must allow for a de-ration factor. Please, before using a jib boom, call our Hire Desk staff and check the Safe Working Load plate on the side of the relevant machine, which will show you the maximum load that can be applied at the end of the jib boom.**

**This load can vary, dependent on which particular GENIE Machine you have.**

**IF IN DOUBT, PLEASE ASK OUR HIRE DESK STAFF**

